

Wireless Temperature Sensor

R711A

User Manual

Copyright©Netvox Technology Co., Ltd.

This document contains proprietary technical information which is the property of NETVOX Technology. It shall be maintained in strict confidence and shall not be disclosed to other parties, in whole or in part, without written permission of NETVOX Technology. The specifications are subject to change without prior notice.

Table of Content

1. Introduction	2
2. Appearance	2
3. Main Features	2
4. Set up Instruction.....	3
5. Data Report.....	4
7. Installation	7
8. Important Maintenance Instruction	8

1. Introduction

R711A is a long distance wireless temperature sensor based on LoRaWAN™ protocol (Class A). It is compatible with LoRaWAN protocol.

LoRa Wireless Technology:

LoRa is a wireless communication technology dedicated to long distance and low power consumption. Compared with other communication methods, LoRa spread spectrum modulation method greatly increases to expand the communication distance. Widely used in long-distance, low-data wireless communications. For example, automatic meter reading, building automation equipment, wireless security systems, industrial monitoring. Main features include small size, low power consumption, transmission distance, anti-interference ability and so on.

LoRaWAN:

LoRaWAN uses LoRa technology to define end-to-end standard specifications to ensure interoperability between devices and gateways from different manufacturers.

2. Appearance



3. Main Features

- Compatible with LoRaWAN
- 2 section 1.5V AA alkaline batteries
- Detect temperature of the air
- Easy set up and installation
- Protection class IP40
- Compatible with LoRaWAN™ Class A
- Frequency hopping spread spectrum technology
- Configurable parameters via third-party software platform, reading data and setting alarms via SMS text and email (optional)
- Applicable to third-party platforms: Actility / ThingPark, TTN, MyDevices / Cayenn
- The product has low power consumption and supports longer battery life.

Note *:

The battery life is determined by the frequency and other variables reported by the sensor.

Please refer to http://www.netvox.com.tw/electric/electric_calc.html

On the website, users can find various models of battery life in different configurations

4. Set up Instruction

On/Off

Power on	Insert batteries. (Open the battery back cover and insert two 1.5V AA batteries into the battery slot)
Turn on	Press and hold the function key till the green indicator flashes once.
Turn off (Restore to factory setting)	Press and hold the function key for 5 seconds and the green indicator flashes 20 times.
Power off	Remove batteries
Note	<ol style="list-style-type: none"> 1. After insert batteries and press the button at the same time, the device will be in engineering test mode. 2. After remove and insert the battery, the device will remember the previous on/off status by default. 3. On/off interval is suggested to be about 10 seconds to avoid the interference of capacitor inductance and other energy storage components.

Network Joining

Never joined the network	<p>Turn on the device to search the network to join.</p> <p>The green indicator stays on for 5 seconds: success</p> <p>The green indicator remains off: fail</p>
Had joined the network (Not restore to factory setting)	<p>Turn on the device to search the previous network to join.</p> <p>The green indicator stays on for 5 seconds: success</p> <p>The green indicator remains off: fail</p>
Fail to join the network	Suggest checking the device registration information on the gateway or consulting your platform server provider if the device fails to join the network.

Function Key

Press and hold for 5 seconds	<p>Restore to factory setting / Turn off</p> <p>The green indicator flashes 20 times: success</p> <p>The green indicator remains off: fail</p>
Press once	<p>The device is in the network: The green indicator flashes once and sends a data report</p> <p>The device is not in the network: The green indicator remains off</p>

Sleeping Mode

The device is on and in the network	Sleeping period: Min Interval. When the reportchange exceeds setting value or the state changes: send a data report according to Min Interval.
-------------------------------------	--

Low Voltage Warning

Low Voltage	2.4V
-------------	------

5. Data Report

The device will immediately send a version package report and a data report including the voltage and temperature.

The device sends data according to the default configuration before any other configuring.

Default setting:

MaxTime: Max Interval = 60min = 3600s

MinTime: Min Interval = 60min = 3600s

Temperature Change = 0x0064 (1 °C)

Battery Change = 0x01 (0.1V)

Note:

1. The cycle of the device sending the data report is according to the default.
2. The interval between two reports must be MinTime.

Please refer Netvox LoRaWAN Application Command document and Netvox Lora Command Resolver

<http://loraresolver.netvoxcloud.com:8888/page/index> to resolve uplink data.

Data report configuration and sending period are as following:

Min Interval (Unit: second)	Max Interval (Unit: second)	Reportable Change	Current Change \geq Reportable Change	Current Change $<$ Reportable Change
Any number between 1~65535	Any number between 1~65535	Can not be 0	Report per Min Interval	Report per Max Interval

Example of ConfigureCmd

FPort: 0x07

Bytes	1	1	Var (Fix =9 Bytes)
	CmdID	DeviceType	NetvoxPayLoadData

CmdID– 1 byte

DeviceType– 1 byte – Device Type of Device

NetvoxPayLoadData– var bytes (Max=9bytes)

Description	Device	Cmd ID	Device Type	NetvoxPayLoadData					
Config ReportReq	R711A	0x01	0xBC	MinTime (2bytes Unit: s)	MaxTime (2bytes Unit: s)	BatteryChange (1byte Unit:0.1v)	Temperature Change (2byte Unit:0.01°C)	Reserved (2Bytes, Fixed 0x00)	
Config ReportRsp		0x81		Status (0x00_success)			Reserved (8Bytes, Fixed 0x00)		
ReadConfig ReportReq		0x02		Reserved (9Bytes, Fixed 0x00)					
ReadConfig ReportRsp		0x82		MinTime (2bytes Unit: s)	MaxTime (2bytes Unit: s)	BatteryChange (1byte Unit: 0.1v)	Temperature Change (2byte Unit: 0.01°C)	Reserved (2Bytes, Fixed 0x00)	

(1) **Command Configuration:**

MinTime = 1min, MaxTime = 1min, BatteryChange = 0.1v, TemperatureChange = 1°C

Downlink: 01BC003C003C0100640000 003C(H_{ex}) = 60(D_{ec}), 0064(H_{ex}) = 100(D_{ec})

Response:

81BC00000000000000000000 (Configuration success)

81BC01000000000000000000 (Configuration failure)

(2) **Read Configuration:**


Downlink: 02BC00000000000000000000

Response:

82BC003C003C0100640000 (Current configuration)

Example for MinTime/MaxTime logic:


Example#1 based on MinTime = 1 Hour, MaxTime= 1 Hour, Reportable Change i.e. BatteryVoltageChange=0.1V

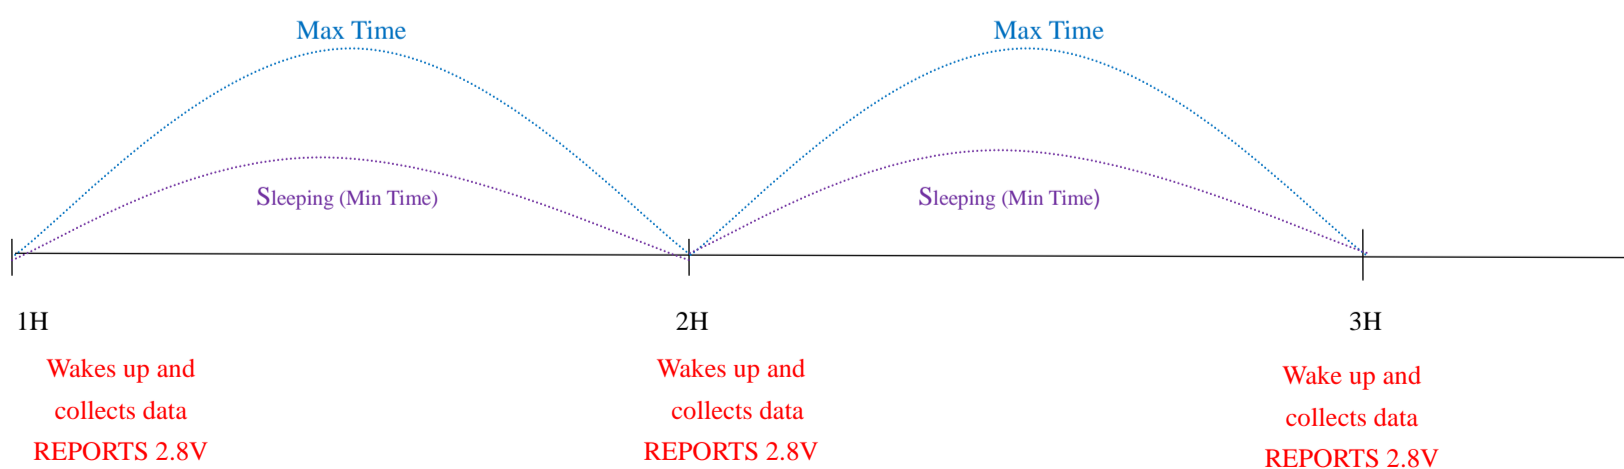


Note:

MaxTime=MinTime. Data will only be report according to MaxTime (MinTime) duration regardless BatteryVoltageChange value.

Example#2 based on MinTime = 15 Minutes, MaxTime= 1 Hour, Reportable Change i.e. BatteryVoltageChange= 0.1V.

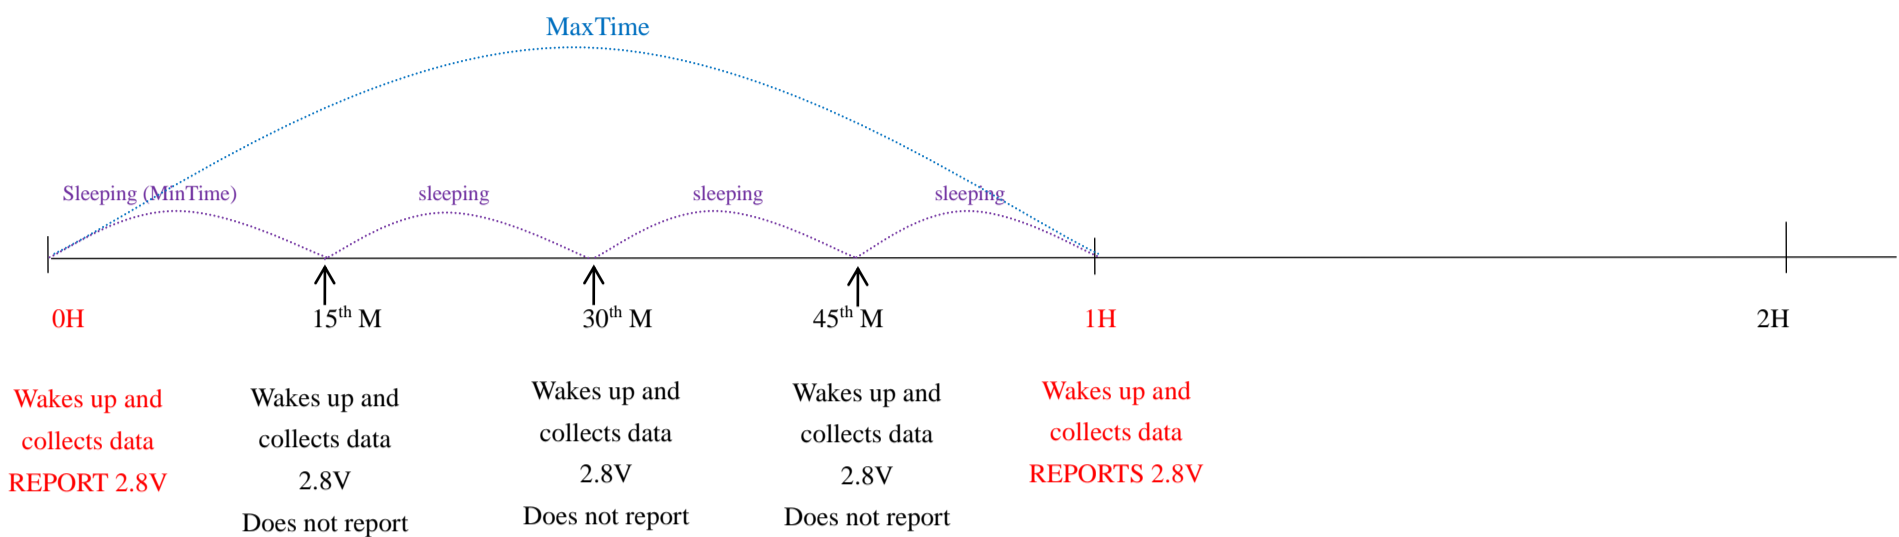

Example#3 based on MinTime = 15 Minutes, MaxTime= 1 Hour, Reportable Change i.e. BatteryVoltageChange= 0.1V.

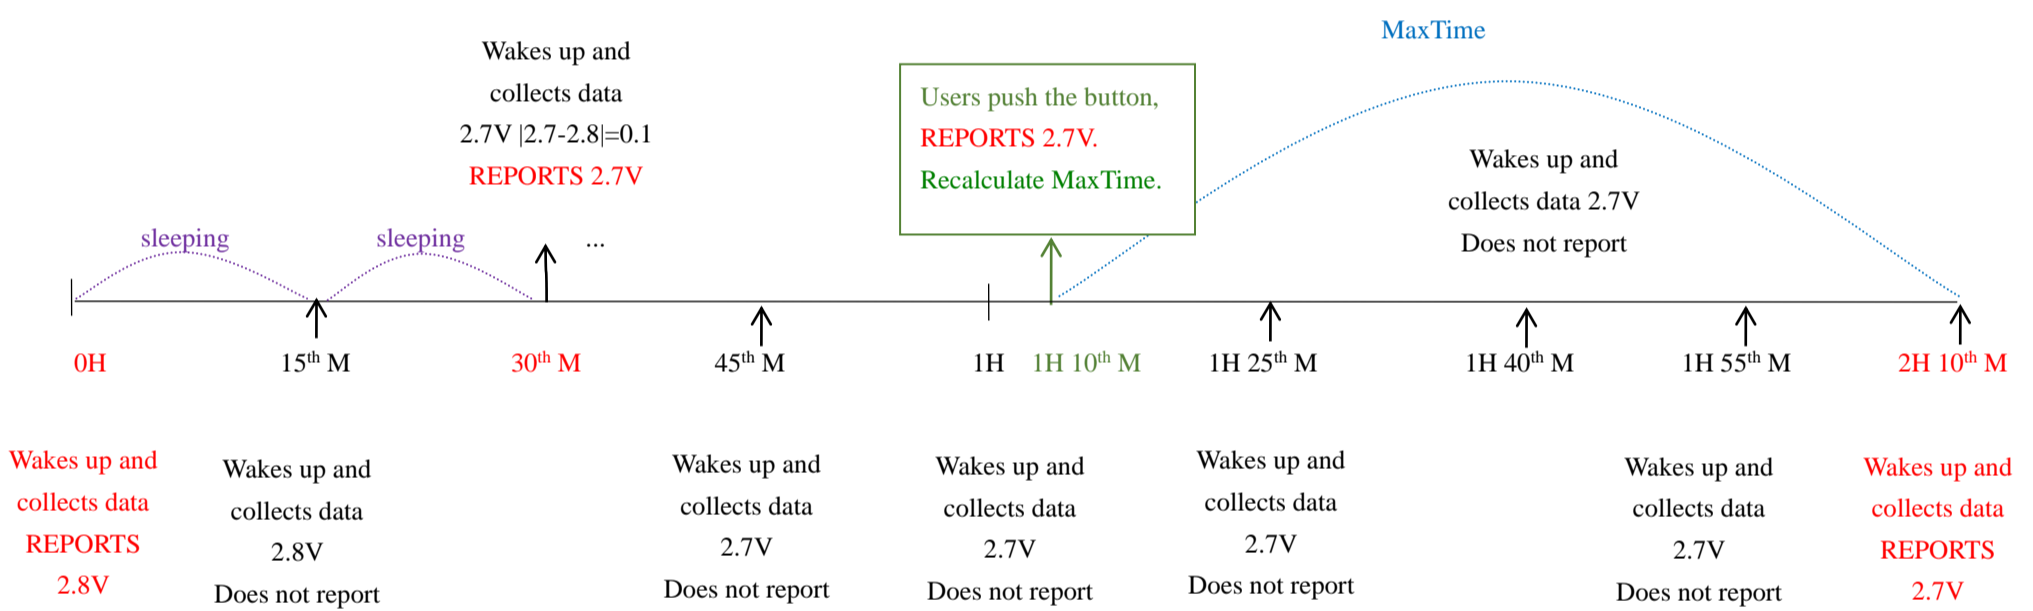

Notes:

- 1) The device only wakes up and performs data sampling according to MinTime Interval. When it is sleeping, it does not collect data.
- 2) The data collected is compared with the last data reported. If the data change value is greater than the ReportableChange value, the device reports according to MinTime interval. If the data variation is not greater than the last data reported, the device reports according to MaxTime interval.
- 3) We do not recommend to set the MinTime Interval value too low. If the MinTime Interval is too low, the device wakes up frequently and the battery will be drained soon.
- 4) Whenever the device sends a report, no matter resulting from data variation, button pushed or MaxTime interval, another cycle of MinTime / MaxTime calculation is started.

7. Installation

This product does not have a waterproof function. After the join into LoRa network, please place it indoors.

1. Please screw the bracket into the wall.



2. Put R711A into the bracket

3. When the temperature detected by the temperature sensor is compared with the last reported temperature value and exceeds the set value (the temperature defaults to 1°C), that is, the temperature exceeds 1 °C, the currently detected value is sent.

Note:

Do not install the device in a metal shielded box or in an environment with other electrical equipment around it to avoid affecting the wireless transmission of the device.

Temperature and Humidity Sensor (R711A) is suitable for the following scenarios:

- Family
- School
- Kindergarten
- Office
- Archive room
- Machine room
- Museum
- Art Museum

Where need to detect the temperature



8. Important Maintenance Instruction

Kindly pay attention to the following in order to achieve the best maintenance of the product:

- Keep the equipment dry. Rain, moisture and various liquids or water may contain minerals that can corrode electronic circuits. In case the device is wet, please dry it completely.
- Do not use or store in dusty or dirty areas. This way can damage its detachable parts and electronic components.
- Do not store in excessive heat place. High temperatures can shorten the life of electronic devices, destroy batteries, and deform or melt some plastic parts.
- Do not store in excessive cold place. Otherwise, when the temperature rises to normal temperature, moisture will form inside which will destroy the board.
- Do not throw, knock or shake the device. Treating equipment roughly can destroy internal circuit boards and delicate structures.
- Do not wash with strong chemicals, detergents or strong detergents.
- Do not paint the device. Smudges can make debris block detachable parts up and affect normal operation.
- Do not throw the battery into the fire to prevent the battery from exploding.

Damaged batteries may also explode.

All the above suggestions apply equally to your device, batteries and accessories.

If any device is not operating properly.

Please take it to the nearest authorized service facility for repairing.