

# **Wireless Multifunctional Control Box**

## **R831C User Manual**

**Copyright©Netvox Technology Co., Ltd.**

This document contains proprietary technical information which is the property of NETVOX Technology. It shall be maintained in strict confidence and shall not be disclosed to other parties, in whole or in part, without written permission of NETVOX Technology. The specifications are subject to change without prior notice.

# Table of Contents

- 1. Introduction..... 2
- 2. Appearance ..... 3
- 3. Features..... 4
- 4. Set up Instruction ..... 5
- 5. Data Report ..... 6
  - 5.1 Example of ReportDataCmd..... 6
  - 5.2 Example of ConfigureCmd..... 7
- 6. Application ..... 10
- 7. Installation..... 10
- 8. Important Maintenance Instruction ..... 12

## 1. Introduction

R831C is a high-reliability switch control device which is a Class C device of netvox based on the LoRaWAN open protocol. The device is compatible with LoRaWAN protocol. R831C is a device used to control the switch and is mainly used for the switch control of the electrical appliances.

R831C can be connected with three-way buttons or the dry contact input signal. The three-way buttons can control the three switches separately. The external button or dry contact input directly controls the relay. In other words, the relay can be controlled by the external button.



### **LoRa Wireless Technology:**

LoRa is a wireless communication technology famous for its long-distance transmission and low power consumption. Compared with other communication methods, LoRa spread spectrum modulation technique greatly extend the communication distance. It can be widely used in any use case that requires long-distance and low-data wireless communications. For example, automatic meter reading, building automation equipment, wireless security systems, industrial monitoring. It has features like small size, low power consumption, long transmission distance, strong anti-interference ability and so on.

### **LoRaWAN:**

LoRaWAN uses LoRa technology to define end-to-end standard specifications to ensure interoperability between devices and gateways from different manufacturers.

## 2. Appearance

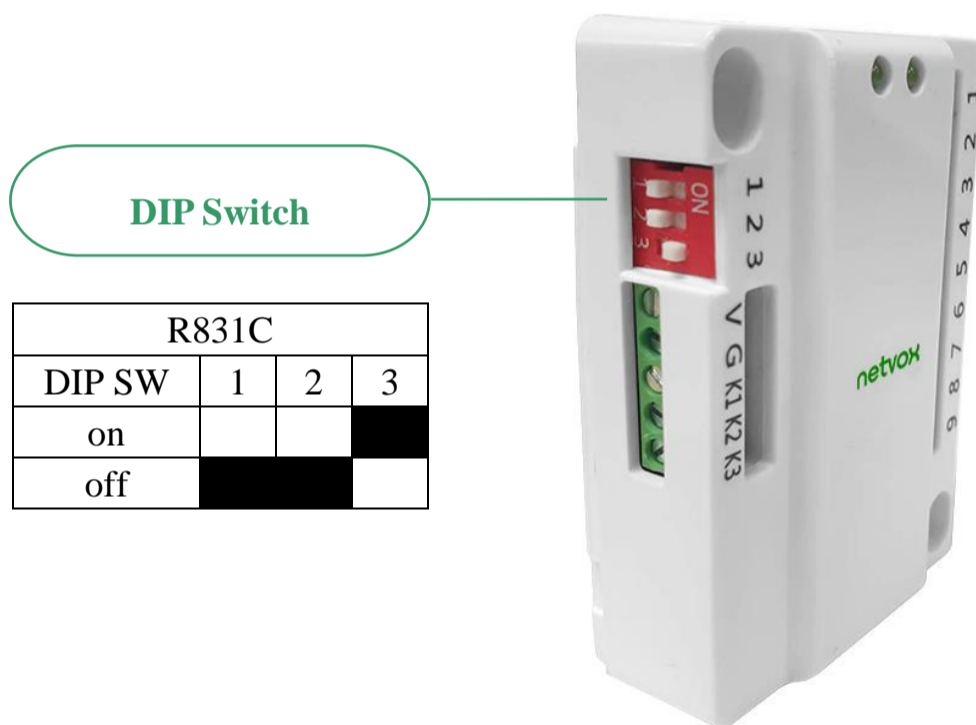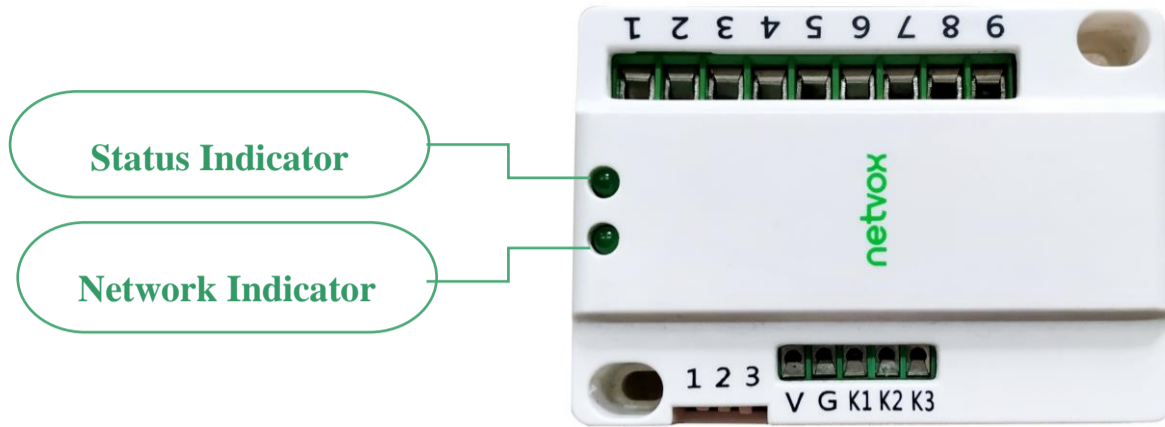

R831C			
DIP SW	1	2	3
on			
off			

<b>Port 1</b>	N/A
<b>Port 2</b>	First load
<b>Port 3</b>	First load
<b>Port 4</b>	Second load
<b>Port 5</b>	Second load
<b>Port 6</b>	Third load
<b>Port 7</b>	Third load
<b>Port 8</b>	GND
<b>Port 9</b>	12v

<b>1~3</b>	DIP Switch (Change R831 series mode)
<b>V</b>	N/A
<b>G</b>	GND
<b>K1</b>	input 1
<b>K2</b>	input 2
<b>K3</b>	input 3



### 3. Features

- SX1276 wireless communication module
- Three relays switch dry contact output
- Compatible with LoRaWAN™ Class C
- Frequency hopping spread spectrum
- Configuration parameters can be configured via a third-party software platform, data can be read and alerts can be set via SMS text and email (optional)
- Applicable to third-party platforms: Actility/ThingPark, TTN, MyDevices/Cayenne
- Improved power management for longer battery life

Note: Please visit [http://www.netvox.com.tw/electric/electric\\_calc.html](http://www.netvox.com.tw/electric/electric_calc.html) for detailed information of battery lifespan.

(1) The actual range may vary depending on the environment.

(2) Battery life is determined by sensor reporting frequency and other variables

## 4. Set up Instruction

### On/Off

Power On	External 12V power supply
Turn On	After plug the power, the status indicator will stay on, it means the boot is successful.
Restore To Factory Setting	Press and hold the function key for 5 seconds till the status indicator flashes 20 times.
Power Off	Remove power
Note:	Press and hold the function key then power on, it will enter engineering mode

### Network Joining

Never Joined The Network	Turn on the device, and it will search for the network to join. The network indicator stays on: joins the network successfully The network indicator stays off : fail to join the network
Had Joined The Network (Not Restore To Factory Setting)	Turn on the device, and it will search for the previous network to join. The network indicator stays on: joins the network successfully The network indicator stays off : fail to join the network
Fail To Join The Network	Suggest checking the device registration information on the gateway or consulting your platform server provider if the device fails to join the network.

### Function Key

Press the function key and hold the pressing for 5 seconds	The device will be set to default and turned off The status indicator light flashes 20 times: success The status indicator light remains off: fail
Press the function key once	The device is in the network: the status indicator light flashes once and sends a report The device is not in the network: the status indicator light remains off

## 5. Data Report

The device will immediately send a version packet and a report packet with the status of the three relay switches.

The device sends data in the default configuration before any configuration is done.

### Default setting:

MaxTime: Max Interval = 900s

MinTime: Min Interval = 2s (The current power state will be checked every Min Interval by default.)

Note:

- (1) The report interval of the device will be programmed based on the default firmware which may vary.
- (2) The interval between two reports must be the MinTime.
- (3) If there are special customized shipments, the setting will be changed according to customer's requirements.
- (4) Please refer Netvox LoRaWAN Application Command document and Netvox Lora Command Resolver

<http://cmddoc.netvoxcloud.com/cmddoc> to resolve uplink data.

Data report configuration and sending period are as following:

Min Interval (Unit: second)	Max Interval (Unit: second)	Reportable Change	Current Change $\geq$ Reportable Change	Current Change $<$ Reportable Change
Any number between 1~65535	Any number between 1~65535	Can not be 0	Report per Min Interval	Report per Max Interval

### 5.1 Example of ReportDataCmd

Fport: 0x06

Bytes	1	1	1	Var (Fix=8 Bytes)
	Version	DeviceType	ReportType	NetvoxPayloadData

**Version**– 1 byte –0x01——the Version of NetvoxLoRaWAN Application Command Version

**DeviceType**– 1 byte – Device Type of Device

**ReportType** – 1 byte –the presentation of the NetvoxPayloadData, according the devicetype

**NetvoxPayloadData**– Var (Fix =8bytes)

### Tips

#### 1. Battery Voltage:

If the battery is equal to 0x00, it means that the device is powered by a DC power supply.

#### 2. Version Packet:

When Report Type=0x00 is the version packet, such as 01AD000A02202208100000, the firmware version is 2022.08.10.

#### 3. Data Packet:

When Report Type=0x01 is data packet

Device	DeviceType	ReportType	NetvoxPayloadData			
R831C	0xAD	0x00	SoftwareVersion (1Byte) Eg.0x0A—V1.0	HardwareVersion (1Byte)	DateCode (4Bytes, eg 0x20170503)	Reserved (2Bytes, fixed 0x00)
		0x01	Relay1Status (1Byte, OFF_0x00, ON_0x01)	Relay2Status (1Byte, OFF_0x00, ON_0x01)	Relay3Status (1Byte, OFF_0x00, ON_0x01)	Reserved (5Bytes, fixed 0x00)

Uplink: 01AD010101010000000000

1<sup>st</sup> (01): Version

2<sup>nd</sup> (AD): DeviceType

3<sup>rd</sup> (01): ReportType

4<sup>th</sup> (01): Relay1Status– ON

5<sup>th</sup> (01) : Relay2Status– ON

6<sup>th</sup> (01) : Relay3Status– ON

7<sup>th</sup> –11<sup>th</sup> (0000000000): Reserved

## 5.2 Example of ConfigureCmd

FPort: 0x07

Bytes	1	1	Var(Fix =9 Bytes)
	CmdID	DeviceType	NetvoxPayloadData

**CmdID**– 1 byte

**DeviceType**– 1 byte – Device Type of Device

**NetvoxPayloadData**– var bytes (Max=9bytes)

Description	Device	CmdID	Device Type	NetvoxPayloadData	
Off	R831C	0x90	0xAD	Channel(1Bytes) bit0_relay1, bit1_relay2, bit2_relay3, bit3_bit7:reserved	Reserved (8ytes, Fixed 0x00)
On		0x91		Channel(1Bytes) bit0_relay1, bit1_relay2,	Reserved (8ytes, Fixed 0x00)



			bit2_relay3, bit3_bit7:reserved	
Toggle		0x92	Channel(1Bytes)  bit0_relay1,  bit1_relay2,  bit2_relay3,  bit3_bit7:reserved	Reserved  (8ytes, Fixed 0x00)
Read Current Status		0x94	Reserved  (9Bytes, Fixed 0x00)	
ConfigReportReq		0x01	MinTime  (2bytes Unit: s)	MaxTime  (2bytes Unit: s)
ConfigReportRsp		0x81	Status  (0x00_success)	Reserved  (8Bytes, Fixed 0x00)
ReadConfigReportReq		0x02	Reserved  (9Bytes, Fixed 0x00)	
ReadConfigReportRsp		0x82	MinTime  (2bytes Unit: s)	MaxTime  (2bytes Unit: s)
SetSwitchTypeReq		0x03	SwitchType (1byte)  0x00_Toggle,  0x01_Momentary	Reserved  (8Bytes, Fixed 0x00)
SetSwitchTypeRsp		0x83	Status  (0x00_success)	Reserved  (8Bytes, Fixed 0x00)
GetSwitchTypeReq		0x04	Reserved  (9Bytes, Fixed 0x00)	
GetSwitchTypeRsp		0x84	SwitchType(1byte)  0x00_Toggle,  0x01_Momentary	Reserved  (8Bytes, Fixed 0x00)

## Max Time and Min Time setting

(1) Command Configuration:

MinTime = 1min, MaxTime = 1min

Downlink: 01AD003C003C0000000000

Response: 81AD000000000000000000 (Configuration success)

81AD010000000000000000 (Configuration failure)

(2) Read Configuration:

Downlink: 02AD000000000000000000

Response: 82AD003C003C0000000000 (Current configuration)

## Relay switch control

(3) Relay1, Relay 2, Relay3 normal open (disconnect)

Downlink: 90AD070000000000000000 // 00000111(Bin)=7(Hex) bit0=relay1, bit1=relay2, bit2=relay3

(4) Relay1, Relay 2, Relay3 normal close (connect)

Downlink: 91AD070000000000000000

(5) Toggle relay normal open/close

Downlink: 92AD070000000000000000

## Relay switch Type

Change relay switch type:

a. Toggle: Normal open/close type switch, ex. toggle switch

b. Momentary: Tact type switch, ex. tact switch

(6) Setting switch type is tact type switch

Downlink: 03AD010000000000000000

Response: 83AD000000000000000000 (Configuration success)

(7) Confirm switch type

Downlink: 04AD000000000000000000

Response: 84AD010000000000000000 (The switch type is tact type)

## 6. Application




User can connect 3 independent buttons to the input separately, and up to 3 devices to be controlled to be connected to the output.

The device can be controlled either manually or via remote command.

## 7. Installation

This product does not have a waterproof function. After joined the network, please place it indoors.

The wiring diagram as follow below:

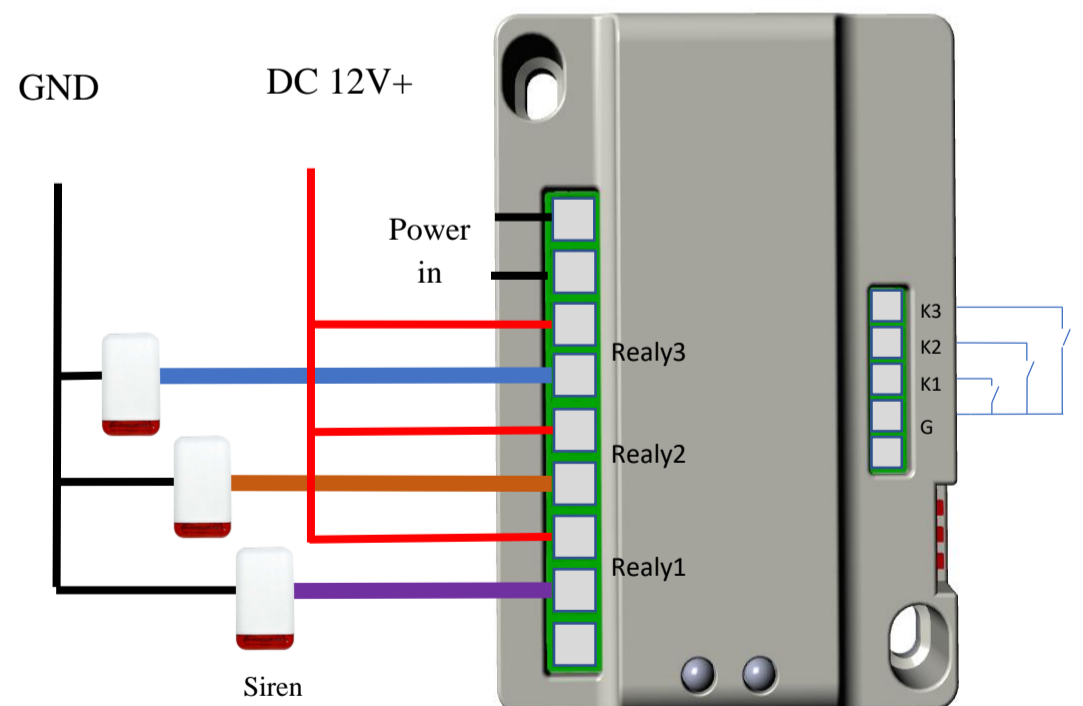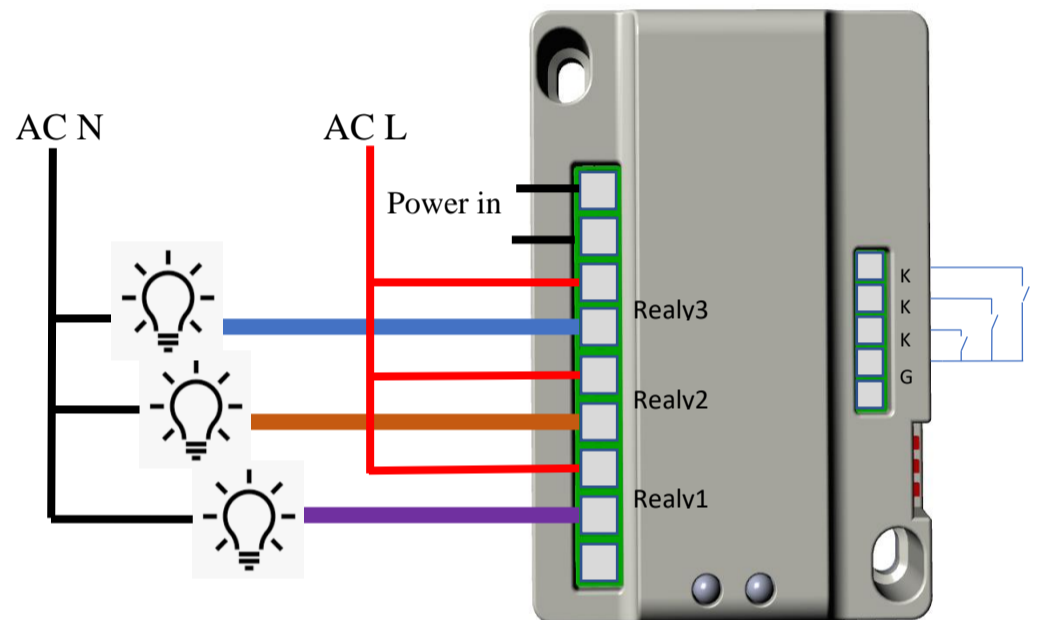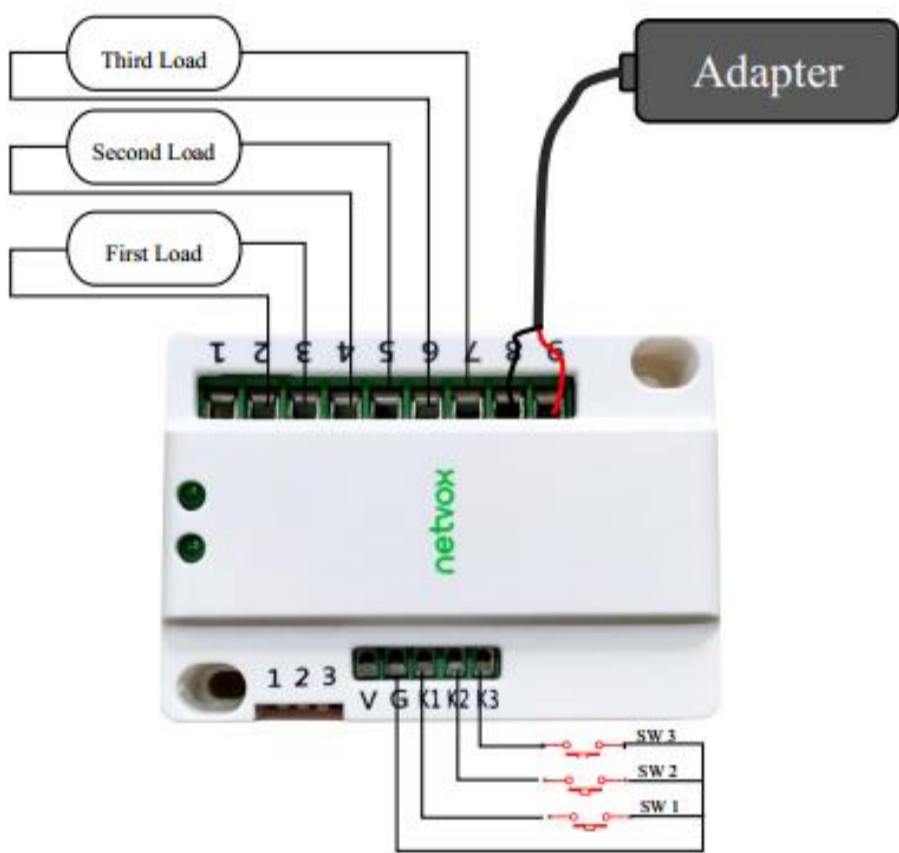

**Instructions on switching the operating mode** (If users do not strictly follow the manual connection, it may damage the product.)

R831 has four operating modes corresponding to the three keys of the DIP switch.

Toggle the switch and power on again to switch the corresponding state.

(If the DIP switch is not correctly toggled, the network lights and status lights will flash alternately, users need to dial power down and power on again.)

(1) R831A – power supply mode: Toggle the DIP switch 1

This mode has two relays involved in operation which are combined for on / off / stop.

(2) R831B - button mode: Toggle the DIP switch 2

This mode has three relays involved in the operation which are respectively for on / off / stop.

(3) R831C - relay mode: Toggle the DIP switch 3

In this mode, the external dry contact can directly control the on / off of the local relay.

(4) R831D - relay mode: Toggle the DIP switches 1 and 2

In this mode, the external dry contact does not directly control the on/off of the local relay but reports the dry contact status and relay status.

## 8. Important Maintenance Instruction

Kindly pay attention to the following to achieve the best maintenance of the product:

- Keep the equipment dry. Rain, moisture, and various liquids or water may contain minerals that can corrode electronic circuits. In case the device is wet, please dry it completely.
- Do not use or store in dusty or dirty areas. This way can damage its detachable parts and electronic components.
- Do not store in excessively hot places. High temperatures can shorten the life of electronic devices, destroy batteries, and deform or melt some plastic parts.
- Do not store in excessively cold places. Otherwise, when the temperature rises to normal temperature, moisture will form inside which will destroy the board.
- Do not throw, knock, or shake the device. Treating equipment roughly can destroy internal circuit boards and delicate structures.
- Do not wash with strong chemicals, detergents, or strong detergents.
- Do not paint the device. Smudges can make debris block detachable parts and affect normal operation.
- Do not throw the battery into the fire to prevent the battery from exploding. Damaged batteries may also explode.

All the above suggestions apply equally to your device, batteries, and accessories. If any device is not operating properly, please take it to the nearest authorized service facility for repair.