

Wireless Multifunctional Control Box

R831D User Manual

Copyright©Netvox Technology Co., Ltd.

This document contains proprietary technical information which is the property of NETVOX Technology. It shall be maintained in strict confidence and shall not be disclosed to other parties, in whole or in part, without written permission of NETVOX Technology. The specifications are subject to change without prior notice.

Table of contents

1. Introduction	2
2. Appearance	3
3. Features.....	4
4. Set up Instruction.....	4
5. Data Report.....	5
5.1 Example of ReportDataCmd	5
5.2 Example of ConfigureCmd	7
5.3 Example of ConfigDryContactINTriggerTime.....	10
5.4 Example of NetvoxLoRaWANRejoin.....	11
6. Application.....	12
7. Installation	12
8. Important Maintenance Instruction	13

1. Introduction

R831D is a high-reliability switch control device which is a Class C device of netvox based on the LoRaWAN open protocol. The device is compatible with LoRaWAN protocol. R831D is a device used to control the switch and is mainly used for the switch control of the electrical appliances.

R831D can be connected with three-way buttons or the dry contact input signal externally. When the state of the external dry contact input changes, the relay will not be changed. The device will report the state of the external dry contact input and the relay.



LoRa Wireless Technology

LoRa is a wireless communication technology famous for its long-distance transmission and low power consumption. Compared with other communication methods, LoRa spread spectrum modulation technique greatly extend the communication distance. It can be widely used in any use case that requires long-distance and low-data wireless communications. For example, automatic meter reading, building automation equipment, wireless security systems, industrial monitoring. It has features like small size, low power consumption, long transmission distance, strong anti-interference ability and so on.

LoRaWAN

LoRaWAN uses LoRa technology to define end-to-end standard specifications to ensure interoperability between devices and gateways from different manufacturers.


2. Appearance

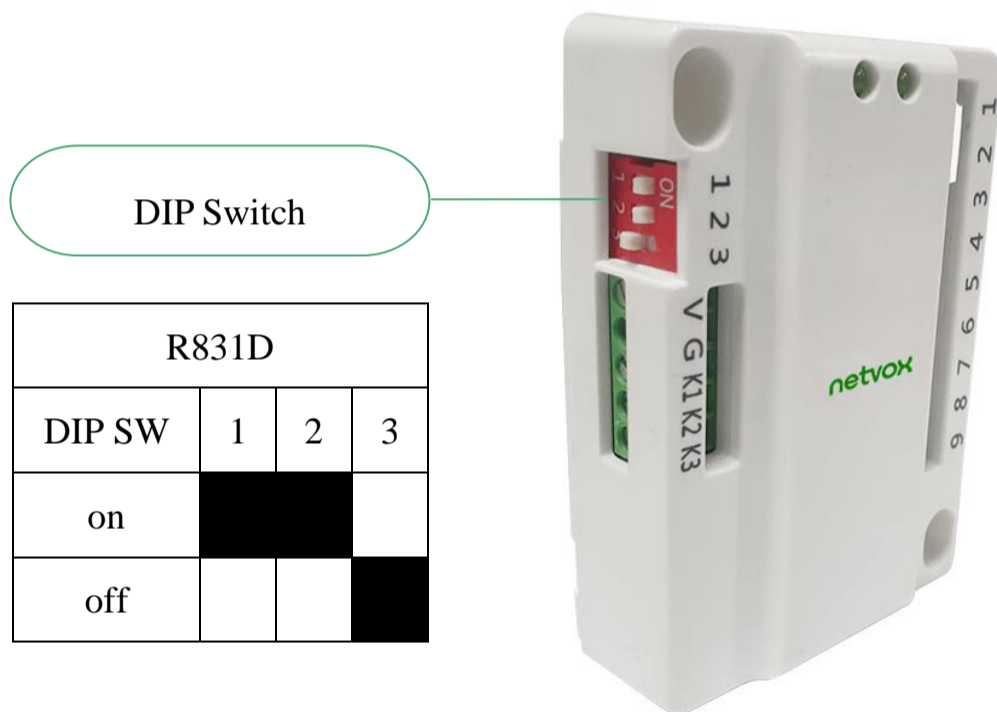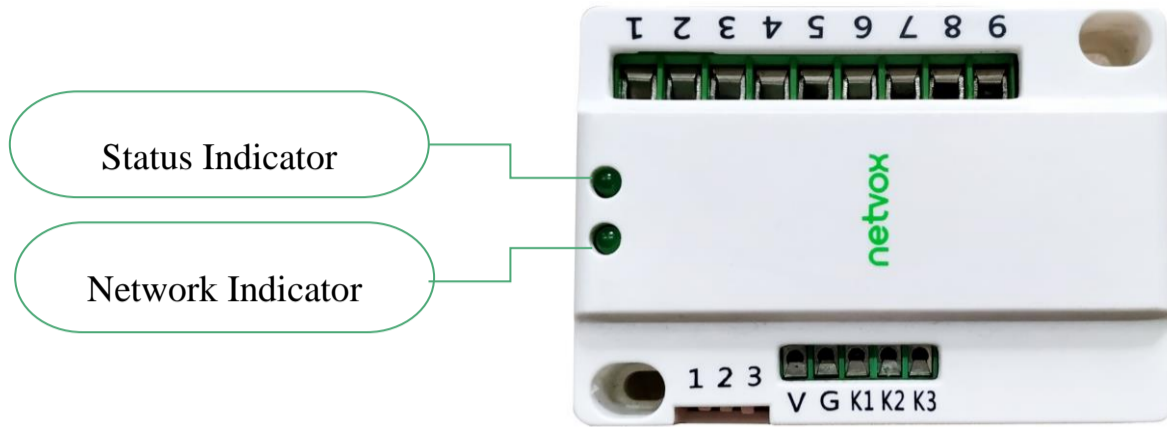

R831D			
DIP SW	1	2	3
on			
off			

Port 1	N/A
Port 2	First load
Port 3	First load
Port 4	Second load
Port 5	Second load
Port 6	Third load
Port 7	Third load
Port 8	GND
Port 9	12v

1~3	DIP Switch (Change R831 series mode)
V	N/A
G	GND
K1	input 1
K2	input 2
K3	input 3

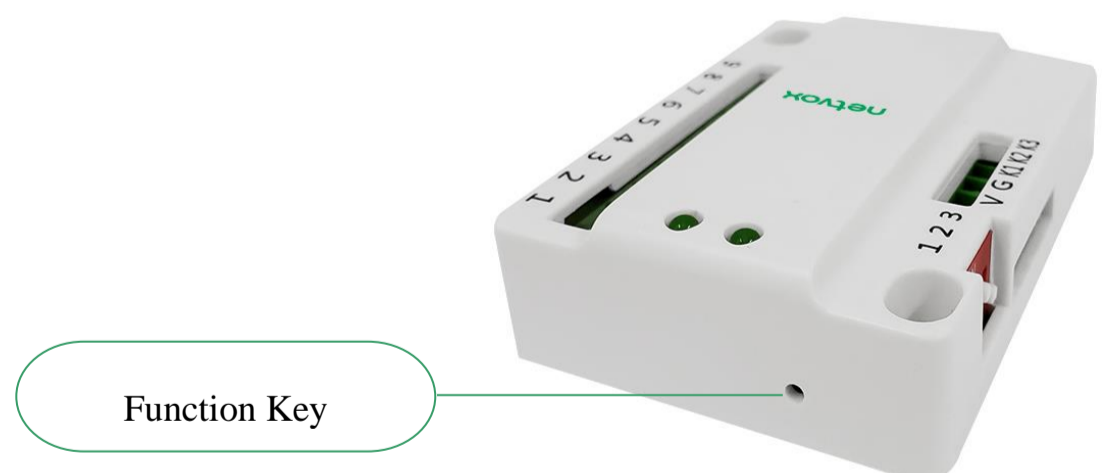

3. Features

- Apply SX1276 wireless communication module
- Three relays switch dry contact output
- Compatible with LoRaWAN™ Class C
- Frequency hopping spread spectrum
- Configuration parameters can be configured via a third-party software platform, data can be read and alerts can be set via SMS text and email (optional)
- Applicable to third-party platforms: Actility/ThingPark, TTN, MyDevices/Cayenne
- Improved power management for longer battery life

Note: Please visit http://www.netvox.com.tw/electric/electric_calc.html for more information about battery lifespan.

4. Set up Instruction

On/Off

Power On	External 12V power supply
Turn On	After plug the power, the status indicator will stay on, it means the boot is successful.
Factory Resetting	Press and hold the function key for 5 seconds till the status indicator flashes 20 times.
Power Off	Remove power
Note	Press and hold the function key then power on, it will enter engineering mode

Network Joining

Never Joined The Network	Turn on the device, and it will search for the network to join. The network indicator stays on: joins the network successfully The network indicator stays off : fail to join the network
Had Joined The Network (Not Restore To Factory Setting)	Turn on the device, and it will search for the previous network to join. The network indicator stays on: joins the network successfully The network indicator stays off : fail to join the network
Fail To Join The Network	Suggest checking the device registration information on the gateway or consulting your platform server provider if the device fails to join the network.

Function Key

Press the function key and hold the pressing for 5 seconds	The device will be set to default and turned off The status indicator light flashes 20 times: success The status indicator light remains off: fail
Press the function key once	The device is in the network: the status indicator light flashes once and sends a report The device is not in the network: the status indicator light remains off

5. Data Report

The device will immediately send a version packet and a report packet with the states of three relay switches and three dry contacts. The device sends data in the default configuration before any configuration is done.

Default setting:

MaxTime: Max Interval = 900s

MinTime: Min Interval = 2s (The current power state will be checked every Min Interval by default.)

RejoinCheckPeriod = 2 (hr)

RejoinThreshold = 3 (times)

Note:

The report interval of the device will be programmed based on the default firmware which may vary.

The interval between two reports must be the MinTime.

If there are special customized shipments, the setting will be changed according to customer's requirements.

Data report configuration and sending period are as follows:

Min Interval (Unit: second)	Max Interval (Unit: second)	Reportable Change	Current Change \geq Reportable Change	Current Change $<$ Reportable Change
Any number between 1~65535	Any number between 1~65535	Cannot be 0	Report per Min Interval	Report per Max Interval

5.1 Example of ReportDataCmd

Bytes	1	1	1	Var (Fix=8 Bytes)
	Version	DeviceType	ReportType	NetvoxPayloadData

Version– 1 byte –0x01—the Version of NetvoxLoRaWAN Application Command Version

DeviceType– 1 byte – Device Type of Device

ReportType – 1 byte –the presentation of the NetvoxPayloadData, according to the devicetype

NetvoxPayloadData– Var (Fix = 8bytes)

Tips

1. Battery Voltage:

If the battery is equal to 0x00, it means that the device is powered by a DC power supply.

2. Version Packet:

When Report Type=0x00 is the version packet, such as 01B0000A02202208100000, the firmware version is 2022.08.10.

3. Data Packet:

When Report Type=0x01 is data packet

Device	Device Type	Report Type	NetvoxPayLoadData						
R831D	0xB0	0x01	Relay1Status (1Byte, OFF_0x00, ON_0x01)	Relay2Status (1Byte, OFF_0x00, ON_0x01)	Relay3Status (1Byte, OFF_0x00, ON_0x01)	Input1 (1Byte, OFF_0x00, ON_0x01)	Input2 (1Byte, OFF_0x00, ON_0x01)	Input3 (1Byte, OFF_0x00, ON_0x01)	Reserved (2Bytes, fixed 0x00)

Uplink: 01B00101010101010000

1st (01): Version

2nd (B0): DeviceType

3rd (01): ReportType

4th (01): Relay1Status — On

5th (01): Relay2Status — On

6th (01): Relay3Status — On

7th (01): Input1 — On

7th (01): Input2 — On

7th (01): Input3 — On

10th –11th (0000): Reserved

5.2 Example of ConfigureCmd

FPort: 0x07

Bytes	1	1	Var (Fix = 9 Bytes)
	CmdID	DeviceType	NetvoxPayloadData

CmdID– 1 byte

DeviceType– 1 byte – Device Type of Device

NetvoxPayloadData– var bytes (Max=9bytes)

Description	Device	CmdID	Device Type	NetvoxPayloadData			
Off	R831D	0x90	0xB0	Channel(1Bytes) bit0_relay1, bit1_relay2, bit2_relay3, bit3_bit7: reserved	Reserved (8ytes, Fixed 0x00)		
On		0x91		Channel(1Bytes) bit0_relay1, bit1_relay2, bit2_relay3, bit3_bit7: reserved	Reserved (8ytes, Fixed 0x00)		
Toggle		0x92		Channel(1Bytes) bit0_relay1, bit1_relay2, bit2_relay3, bit3_bit7: reserved	Reserved (8ytes, Fixed 0x00)		
Read Current Status		0x94		Reserved (9Bytes, Fixed 0x00)			
ConfigReportReq		0x01		MinTime (2bytes Unit: s)	MaxTime (2bytes Unit: s)	Reserved (5Bytes, Fixed 0x00)	
ConfigReportRsp		0x81		Status (0x00_success)	Reserved (8Bytes, Fixed 0x00)		
ReadConfigReportReq		0x02		Reserved (9Bytes, Fixed 0x00)			
ReadConfigReportRsp		0x82		MinTime (2bytes Unit: s)	MaxTime (2bytes Unit: s)	Reserved (5Bytes, Fixed 0x00)	

SetSwitchTypeReq	0x03	SwitchType (1byte) 0x00_Toggle, 0x01_Momentary	Reserved (8Bytes, Fixed 0x00)
SetSwitchTypeRsp	0x83	Status (0x00_success)	Reserved (8Bytes, Fixed 0x00)
GetSwitchTypeReq	0x04	Reserved (9Bytes, Fixed 0x00)	
GetSwitchTypeRsp	0x84	SwitchType(1byte) 0x00_Toggle, 0x01_Momentary	Reserved (8Bytes, Fixed 0x00)

Max Time and Min Time setting

(1) Command Configuration:

MinTime = 1min 、MaxTime = 1min

Downlink: 01B0003C003C0000000000

Response: 81B000000000000000000000 (Configuration success)

81B001000000000000000000 (Configuration failure)

(2) Read Configuration:

Downlink : 02B0000000000000000000

Response:

82B0003C003C0000000000 (Current configuration)

Relay switch control

(3) Relay1, Relay 2, Relay3 normal open (off / disconnect)

Downlink: 90B0070000000000000000 // 00000111(Bin)=07(Hex) bit0=relay1, bit1=relay2, bit2=relay3

Relay1 normal open (disconnect)

Downlink: 90B0010000000000000000 // 00000001(Bin) =01(Hex)

Relay2 normal open (disconnect)

Downlink: 90B0020000000000000000 // 00000010(Bin) =02(Hex)

Relay3 normal open (disconnect)

Downlink: 90B0040000000000000000 // 00000100(Bin) =04(Hex)

(4) Relay1, Relay 2, Relay3 normal close (on / connect)

Downlink: 91B0070000000000000000

Relay1 normal close (connect)

Downlink: 91B0010000000000000000

Relay2 normal close (connect)

Downlink: 91B0020000000000000000

Relay3 normal close (connect)

Downlink: 91B0040000000000000000

(5) Relay1, Relay 2, Relay3 reverse

Downlink: 92B0070000000000000000

Relay1 reverse

Downlink: 92B0010000000000000000

Relay2 reverse

Downlink: 92B0020000000000000000

Relay3 reverse

Downlink: 92B0040000000000000000

Relay switch Type

Change relay switch type:

- a. Toggle: Normal open/close type switch, ex. toggle switch
- b. Momentary: Tact type switch, ex. tact switch

(6) Setting switch type is tact type switch

Downlink: 03B0010000000000000000

Response: 83B0000000000000000000 (Configuration success)

(7) Confirm switch type

Downlink: 04B0000000000000000000

Response: 84B0010000000000000000 (The switch type is tact type)

5.3 Example of ConfigDryContactINTriggerTime

Fport: 0x0F

Description	CmdID	PayLoad (Fix byte,2byte)	
SetDryContactINTriggerTimeReq	0x01	MinTriggeTime (2 bytes) (Unit: 1ms, Default 50ms)	
SetDryContactINTriggerTimeRsp	0x81	Status (0x00_Success 0x01_Failure)	SetDryContactINTriggerTimeRsp
GetDryContactINTriggerTimeReq	0x02	Reserved (2 Byte, Fixed 0x00)	
GetDryContactINTriggerTimeRsp	0x82	MinTriggeTime (2 bytes) (Unit: 1ms, Default 50ms)	

(1) Configure MinTriggeTime = 100ms

Downlink: 010064

Response:

810000 (Configuration success)

810100 (Configuration failure)

(2) Read parameter

Downlink: 020000

Response:

820064 (current parameter)

5.4 Example of NetvoxLoRaWANRejoin

(NetvoxLoRaWANRejoin command is to check if the device is still in the network. If the device is disconnected, it will automatically rejoin back to the network.)

Fport: 0x20

CmdDescriptor	CmdID (1 Byte)	Payload (5 Bytes)	
SetNetvoxLoRaWANRejoinReq	0x01	RejoinCheckPeriod (4 Bytes, Unit: 1s 0xFFFFFFFF Disable NetvoxLoRaWANRejoinFunction)	RejoinThreshold (1 Byte)
SetNetvoxLoRaWANRejoinRsp	0x81	Status (1 Byte, 0x00_success)	Reserved (4 Bytes, Fixed 0x00)
GetNetvoxLoRaWANRejoinReq	0x02	Reserved (5 Bytes, Fixed 0x00)	
GetNetvoxLoRaWANRejoinRsp	0x82	RejoinCheckPeriod (4 Bytes, Unit: 1s)	RejoinThreshold (1 Byte)

(1) Configure parameters

RejoinCheckPeriod = 60min (0x00000E10); RejoinThreshold = 3 times (0x03)

Downlink: 0100000E1003

Response: 810000000000 (configuration succeed)

810100000000 (configuration fail)

(2) Read configuration

Downlink: 020000000000

Response: 8200000E1003

Note: a. Set RejoinCheckThreshold as 0xFFFFFFFF to stop the device from rejoining the network.

b. The last configuration would be kept as user reset the device back to the factory setting.

c. Default setting: RejoinCheckPeriod = 2 (hr) and RejoinThreshold = 3 (times)


6. Application

In the case of appliance switch control, three appliances can be connected to R831D, and the connection and disconnect of appliances can be remotely controlled by issuing commands.

7. Installation

This product does not have a waterproof function. After joined the network, please place it indoors.

The wiring diagram as follow below:

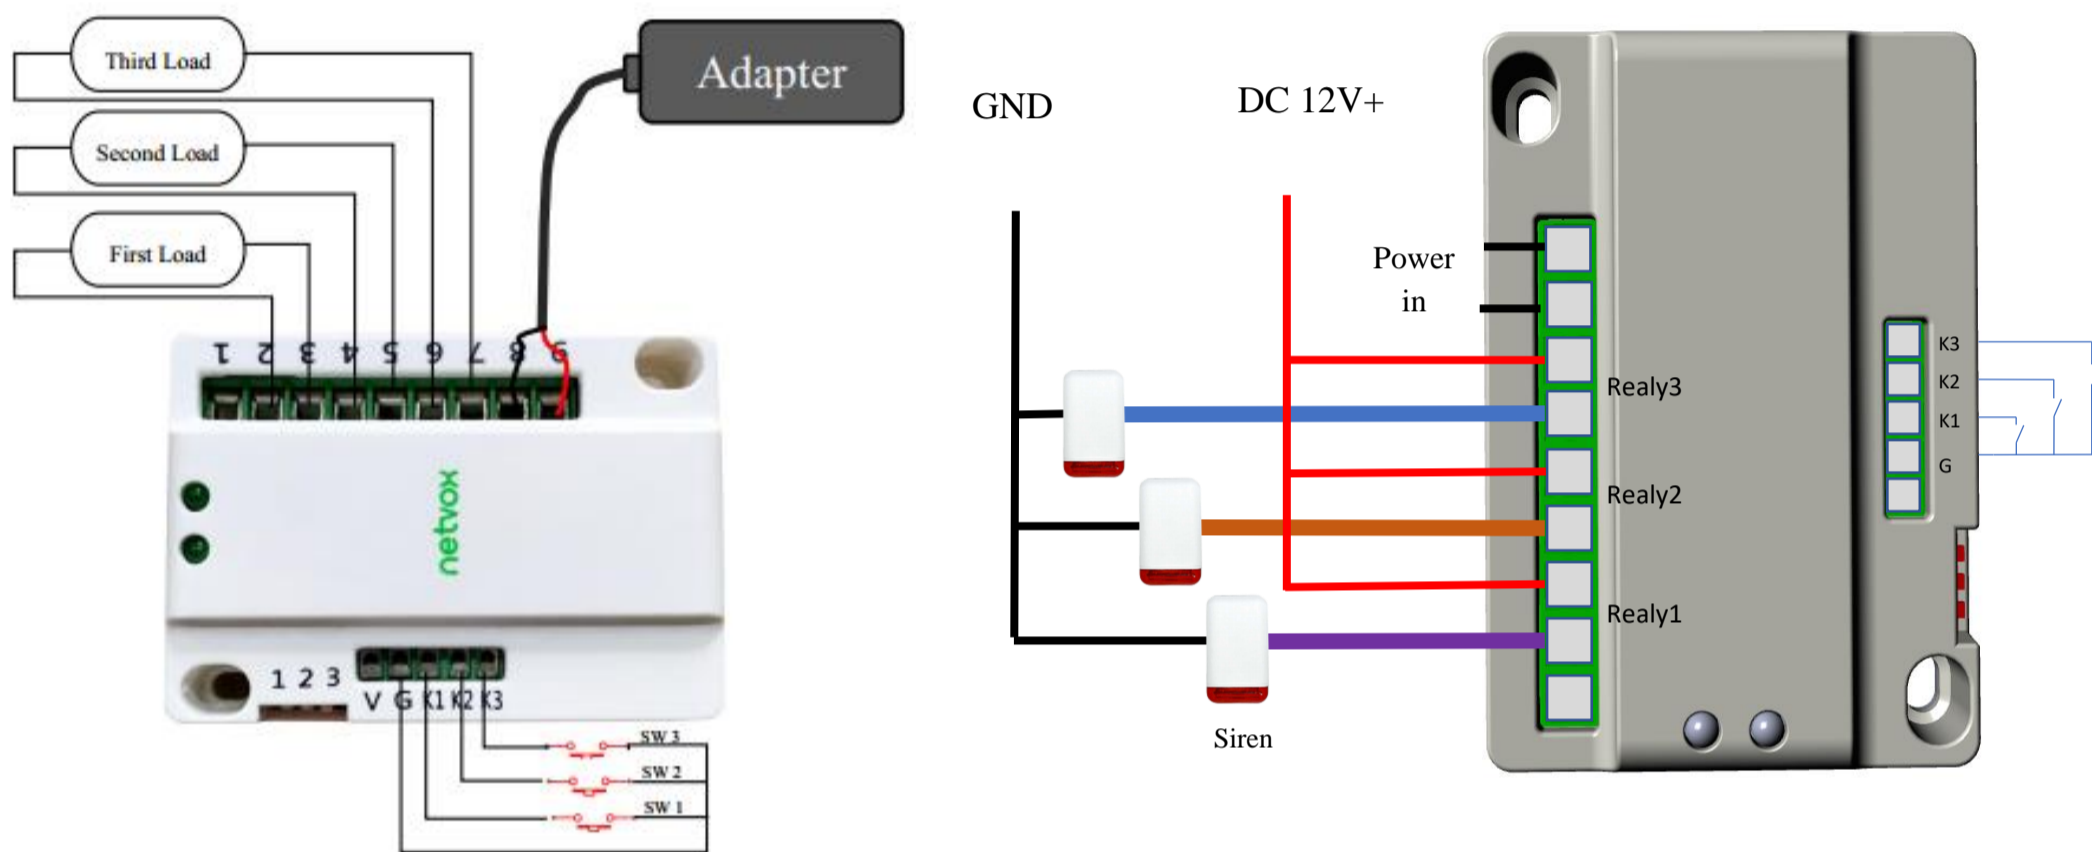

Instructions on switching the operating mode (If users do not strictly follow the manual connection, it may damage the product.)

R831 has four operating modes corresponding to the three keys of the DIP switch.

Toggle the switch and power on again to switch the corresponding state.

(If the DIP switch is not correctly toggled, the network lights and status lights will flash alternately, users need to dial power down and power on again.)

(1) R831B - light current motor mode : Toggle the DIP switch 2

This mode has three relays involved in the operation which are respectively for on /off / stop.

(2) R831C - relay mode : Toggle the DIP switch 3

In this mode, the external dry contact can directly control the on / off of the local relay.

(3) R831D - relay mode : Toggle the DIP switches 1 and 2

In this mode, the external dry contact does not directly control the on/off of the local relay but reports the dry contact status and relay status.

8. Important Maintenance Instruction

Kindly pay attention to the following in order to achieve the best maintenance of the product:

- Keep the equipment dry. Rain, moisture and various liquids or water may contain minerals that can corrode electronic circuits.
In case the device is wet, please dry it completely.
- Do not use or store in dusty or dirty areas. This way can damage its detachable parts and electronic components.
- Do not store in excessive heat place. High temperatures can shorten the life of electronic devices, destroy batteries, and deform or melt some plastic parts.
- Do not store in excessive cold place. Otherwise, when the temperature rises to normal temperature, moisture will form inside which will destroy the board.
- Do not throw, knock or shake the device. Treating equipment roughly can destroy internal circuit boards and delicate structures.
- Do not wash with strong chemicals, detergents or strong detergents.
- Do not paint the device. Smudges can make debris block detachable parts up and affect normal operation.
- Do not throw the battery into the fire to prevent the battery from exploding. Damaged batteries may also explode.

All the above suggestions apply equally to your device, batteries and accessories. If any device is not operating properly. Please take it to the nearest authorized service facility for repairing.