

Wireless PM2.5 / Temperature / Humidity Sensor User Manual

Copyright©Netvox Technology Co., Ltd.

This document contains proprietary technical information which is the property of NETVOX Technology. It shall be maintained in strict confidence and shall not be disclosed to other parties, in whole or in part, without written permission of NETVOX Technology. The specifications are subject to change without prior notice.

Table of Content

1. Introduction	2
2. Appearance	3
3. Main Feature	4
4. Set up Instruction	4
5. Data Report	6
6. Installation.....	8
7. Important Maintenance Instruction.....	10

1. Introduction

RA0716_R72616_RA0716Y is a Class A type device based on the LoRaWAN open protocol of Netvox and is compatible with the LoRaWAN protocol.

RA0716_R72616_RA0716Y can be connected with the sensor of the temperature and humidity and PM2.5. The values collected by the sensor are reported to the corresponding gateway.

LoRa Wireless Technology:

LoRa is a wireless communication technology dedicated to long distance and low power consumption. Compared with other communication methods, LoRa spread spectrum modulation method greatly increases to expand the communication distance. Widely used in long-distance, low-data wireless communications. For example, automatic meter reading, building automation equipment, wireless security systems, industrial monitoring. Main features include small size, low power consumption, transmission distance, anti-interference ability and so on.

LoRaWAN:

LoRaWAN uses LoRa technology to define end-to-end standard specifications to ensure interoperability between devices and gateways from different manufacturers.

2. Appearance



Figure 1 RA0716



Figure 2 R72616



Figure 3 RA0716Y

3. Main Feature

- Compatible with LoRaWAN
- RA0716 and RA0716Y applies DC 12V adapters
- R72616 applies solar and rechargeable lithium batteries
- Simple operation and setting
- PM2.5, temperature and humidity detection
- Adopt SX1276 wireless communication module

4. Set up Instruction

On/Off

Power On	RA0716 and RA0716Y are connected to DC 12V adapter for power on. R72616 applies solar power and rechargeable lithium batteries.
Turn On	Connect with power on to turn on
Restore to Factory Setting	Press and hold the function key for 5 seconds, the green indicator flashes 20 times: success
Power Off	Disconnect from the power supply
Note	<ol style="list-style-type: none">1. The engineering test requires programming a separate engineering testing software.2. The interval between on and off is suggested to be about 10 seconds to avoid the interference of capacitor inductance and other energy storage components.

Network Joining

Never Joined the Network	Turn on the device to search the network The green indicator keeps on for 5 seconds: success The green indicator remains off: fail
Had joined the network (Not restore to factory setting)	Turn on the device to search the previous network The green indicator keeps on for 5 seconds: success The green indicator remains off: fail
Fail to Join the Network	<ol style="list-style-type: none">1. For power saving, suggest to remove the batteries when the device is not in use.2. Suggest to check the device registration information on the gateway or consult your platform server provider if the device fails to join the network.

Function Key

Press and Hold for 5 Seconds	Restore to the factory setting/ Turn off The green indicator flashes for 20 times: success The green indicator remains off: fail
Press Once	The device is in the network: the green indicator flashes once and the device sends a data report The device is not in the network: the green indicator remains off

Low Voltage Threshold

Low Voltage Threshold	10.5 V
-----------------------	--------

Threshold Restore to Factory Setting

Description	RA0716_R72616_RA0716Y has the function of the power-down saving the memory of network-joining information. This function turns off in default, that is, it will rejoin every time when it is power on. If the device is turned on by the ResumeNetOnOff command, the last network-joining information will be recorded when every time it is power on. (including saving the network address information that it is assigned, etc.) If users want to join a new network, the device needs to perform the factory setting, and it will not rejoin the last network.
Operation Method	<ol style="list-style-type: none">1. Press and hold the binding button for 5 seconds and then release (release the binding button when the LED flashes), and the LED flashes 20 times.2. The device automatically restarts to rejoin the network.

5. Data Report

After power on, the device will immediately send a version packet report and the data report including the temperature, humidity, PM2.5 and voltage.

The device sends data according to the default configuration before any other configuring.

ReportMaxTime:

RA0716_ RA0716Y is 900s,

R72616 is 1800s (subject to original setting)

* MaxTime cannot be set less than 15 min

* The value of the ReportMaxTime should be greater than ReportType count *ReportMinTime+10

ReportMinTime:

30s (US915, AU915, KR920, AS923, IN865)

120s (EU868)

ReportType count = 1

Note:

- (1) The cycle of the device sending the data report is according to the default.
- (2) The interval between two reports must be the MaxTime.
- (3) ReportChange is not supported by RA0716_R72616_RA0716Y (Invalid configuration). The data report is sent according to ReportMaxTime as a cycle (the first data report is the start to the end of a cycle).
- (4) Data packet: PM2.5, voltage, temperature and humidity.
- (5) The device also supports the TxPeriod cycle configuration instructions of Cayenne. Therefore, the device can perform the report according to the TxPeriod cycle. The particular report cycle is ReportMaxTime or TxPeriod depending on which report cycle was configured last time.
- (6) It would take 35 seconds for the sensor to sample and process the collected value after pressing the button, please be patient.

Please refer Netvox LoRaWAN Application Command document and Netvox Lora Command Resolver

<http://cmddoc.netvoxcloud.com/cmddoc> to resolve uplink data.

Report Configuration

Description	Device	CmdID	DeviceType	NetvoxPayloadData		
ConfigReportReq	RA0716 R72616 RA0716Y (alias RA0716Y)	0x01	0x35 0x36 0x37	MinTime (2bytes Unit:s)	MaxTime (2bytes Unit: s)	Reserved (5Bytes, Fixed 0x00)
ConfigReportRsp		0x81		Status (0x00_success)	Reserved (8Bytes, Fixed 0x00)	
ReadConfigReportReq		0x02		Reserved (9Bytes, Fixed 0x00)		
ReadConfigReportRsp		0x82		MinTime (2bytes Unit: s)	MaxTime (2bytes Unit: s)	Reserved (5Bytes, Fixed 0x00)

(1) Configure RA0716 device parameter MinTime = 30s, MaxTime = 900s

Device Return:

81350000000000000000 (configuration success)

81350100000000000000 (configuration failure)

*Note:

The value of MinTime should be $\geq 30s$ (US915, AU915, KR920, AS923, IN865)

The value of MinTime should be $\geq 120s$ (EU868)

The value of MaxTime should be $\geq 900s$

(2) Read RA0716 device parameter

Downlink: 02350000000000000000

Device Return:

8235001E03840000000000 (device current parameter)

6. Installation

1. **RA0716** does not have the waterproof function. After the device completes joining the network, please place it properly.


2. **R72616** has a waterproof function. After the device completes joining the network, please place it outdoors.

(1) In the installed position, loosen the U-shaped screw, the mating washer and the nut at the bottom of R72616, and then make the U-shaped screw pass through the appropriate size cylinder and fix it on the fixing strut flap of R72616. Install the washer and the nut in order and lock the nut till R72616 body is stable and does not shake.

(2) At the upper side of the fixed position of R72616, loosen the two U-shaped screws, the mating washer and nut on the side of the solar panel. Make the U-shaped screw pass through the appropriate size cylinder and fix them on the main bracket of the solar panel and install the washer and the nut in sequence. Lock nut till the solar panel is stable and does not shake.

(3) After adjusting the angle of the solar panel completely, lock the nut.

(4) Connect the top waterproof cable of R72616 with the wiring of the solar panel and lock it tight.

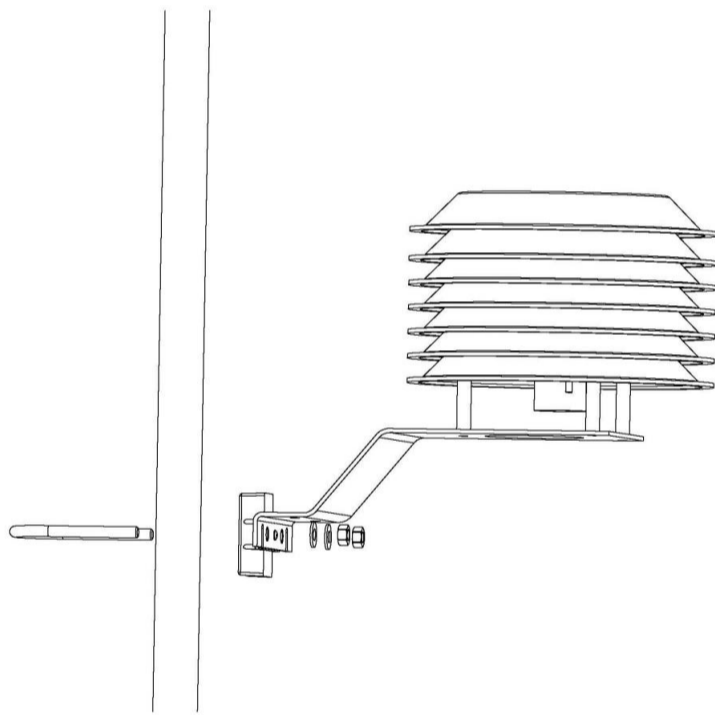

(5) Rechargeable lithium battery

R72616 has a battery pack inside. Users can buy and install rechargeable 18650 lithium battery, a total of 3 sections, voltage 3.7V/ every single rechargeable lithium battery, recommended capacity 5000mah. The installation of rechargeable lithium battery steps are as follows:

1: Remove the four screws around battery cover.

2: Insert three 18650 lithium batteries. (Please make sure the positive and negative level of the battery)

3: Press the activation button on the battery pack for the first time.

4: After activation, close the battery cover and lock the screws around battery cover.




Fig. Rechargeable Lithium Battery

3. **RA0716Y** is waterproof and can be placed outdoors after the device completes joining the network..

(1) In the installed position, loosen the U-shaped screw, the mating washer and the nut at the bottom of RA0716Y, and then make the U-shaped screw pass through the appropriate size cylinder and fix it on the fixing strut flap of RA0716Y. Install the washer and the nut in order and lock the nut till RA0716Y body is stable and does not shake.

(2) Loosen the M5 nut at the bottom of the RA0716Y matte and take the matte together with the screw.

(3) Make the DC adaptor pass through the central hole of the bottom cover of RA0716Y and insert it into the RA0716Y DC socket, and then put the mating screw to the original position and lock the M5 nut tight.

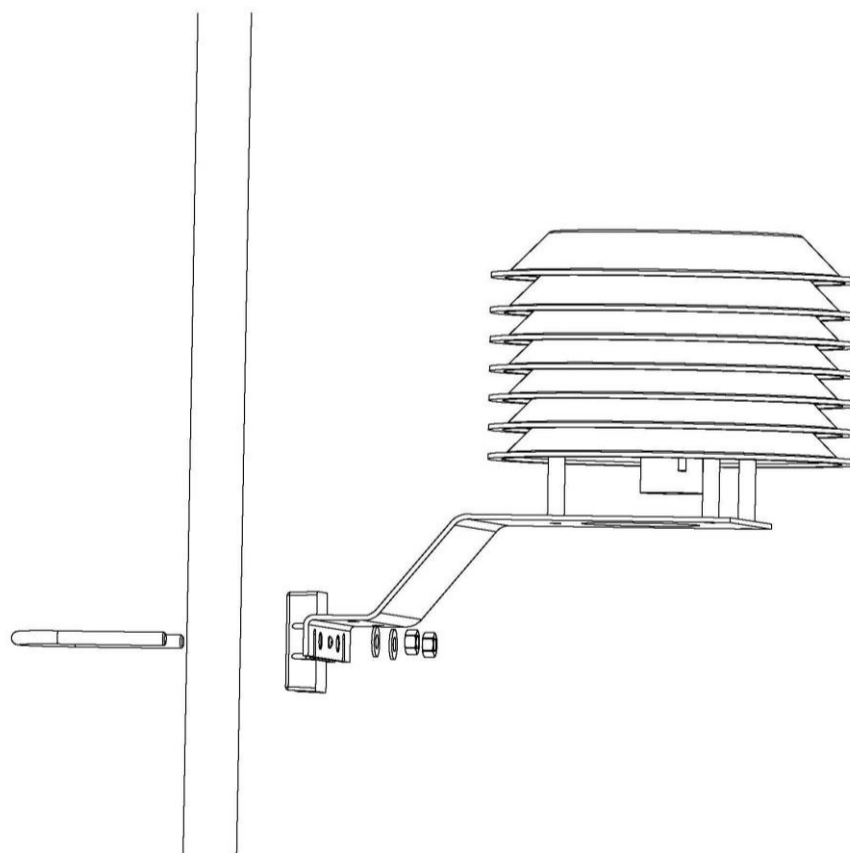

7. Important Maintenance Instruction

The device is a product with superior design and craftsmanship and should be used with care.

The following suggestions will help you use the warranty service effectively.

- Keep the device dry. Rain, moisture and various liquids or water may contain minerals that can corrode electronic circuits. In case the device is wet, please dry it completely.
- Do not use or store in dusty or dirty areas. This way can damage its detachable parts and electronic components.
- Do not store in excessive hot place. High temperatures can shorten the life of electronic devices, destroy batteries, and deform or melt some plastic parts.
- Do not store in excessive cold place. Otherwise, when the temperature rises to normal temperature, moisture will form inside which will destroy the board.
- Do not throw, knock or shake the device. Treating device roughly can destroy internal circuit boards and delicate structures.
- Do not wash with strong chemicals, detergents or strong detergents.
- Do not paint the device. Smudges can make debris block detachable parts up and affect normal operation.
- Do not throw the battery into the fire to prevent the battery from exploding. Damaged batteries may also explode.

All the above suggestions apply equally to your device, batteries and accessories.

If any device is not operating properly, please take it to the nearest authorized service facility for repairing.